INSTRUCTION MANUAL

VIBRATING WIRE WATER LEVEL SENSOR
Model NIVOLIC WL

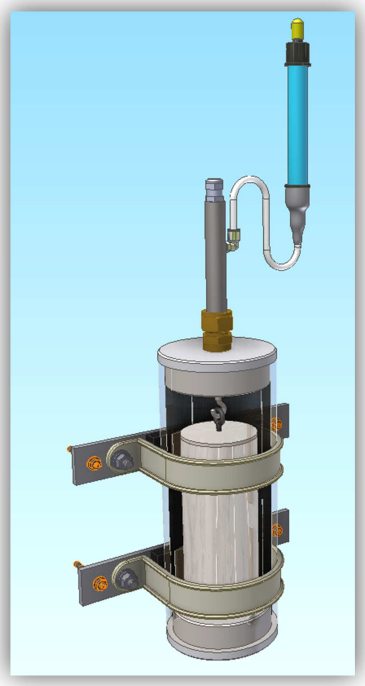

© Roctest Limited, 2013. All rights reserved.

This product should be installed and operated only by qualified personnel. Its misuse is potentially dangerous. The Company makes no warranty as to the information furnished in this manual and assumes no liability for damages resulting from the installation or use of this product. The information herein is subject to change without notification.

Tel.: 1.450.465.1113 • 1.877.ROCTEST (Canada, USA) • +33.1.64.06.40.80 (France) • +41.91.610.18.00 (Switzerland)
www.roctest-group.com

TABLE OF CONTENTS

1 PRODUCT 1
2 INSTALLATION 1
2.1 Verification Procedure 2
2.2 Anchoring chamber to the wall 2
2.3 Installation of the sensor onto the chamber 3
2.3.1 Gently remove the sensor's protection cap 3
2.3.2 Fixing the sensor to the top cover 3
2.3.3 Lower the weight into the chamber 3
3 CALIBRATION DATA AND READINGS 4
3.1 Calibration 4
3.2 Initial readings 4
3.3 Readout procedure 4
3.4 Relative movement equation (with MB-3TL reaout unit) 4
4 CONVERSION TABLE FOR TEMPERATURE 6
5 MISCELLANEOUS 10
5.1 Conversion factors 10

1 PRODUCT

The NIVOLIC WL vibrating wire hydraulic level sensor is designed to detect changes of elevation of water levels. It consists of a chamber in which a weight is suspended to a vibrating wire transducer. Changes in elevation of the water level in the chamber modify the buoyancy force acting on the weight, thus modifying the resonant frequency of the vibrating wire.

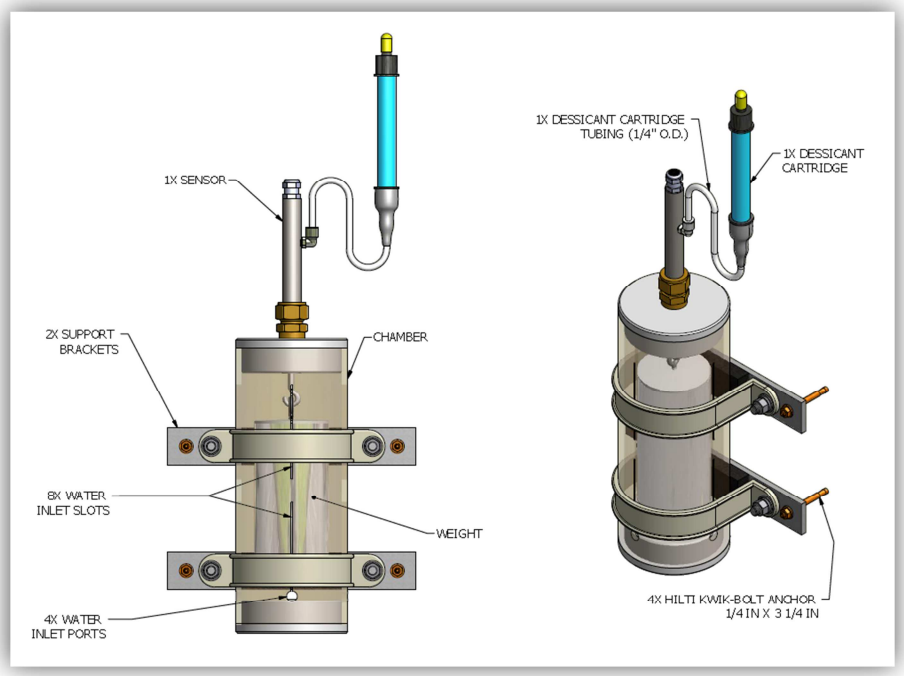

TYPICAL INSTALLATION LAYOUT

2 INSTALLATION

The NIVOLIC WL is provided with a chamber made of a PVC pipe, where the weight and the sensor will be installed inside. This chamber must be installed vertically in an area where there is little water turbulence and positioned in such a way that the average water level coincides with the middle of the suspended weight. This configuration enables the NIVOLIC WL to monitor water level fluctuations around its mid-range. It is important to install the chamber vertically, since any friction from the weight rubbing along the chamber's inner surface will influence the sensor's reading.

2.1 VERIFICATION PROCEDURE

1. Gently remove the sensor's protection cap as shown below.
2. Attach the weight to the sensor's hook.
3. Lift the sensor and the suspended weight, and take a reading.
4. Readings must be quite stable and between 8000 and 11000 LU.

Readings must be taken with the MB-3TL at: **Type** Hz2 + Thermistor, and **at Sweep frequency C (or B).** Note that NIVOLIC WL's range straddle between Sweep position B and C.

WARNING: THE SENSOR IS FRAGILE. AVOID ANY SHOCKS ON ITS HOOK. LIFT THE WEIGHT VERY GENTLY. DO NOT LET IT SWING. AVOID LATERAL SHOCKS ON THE HOOK.

2.2 ANCHORING CHAMBER TO THE WALL

The installation is made by using two PVC pipe support brackets bolted onto a stainless steel flat bar to hold the chamber in place. For concrete mounting, 4 Hilti kwik-bolt anchors (¼" x 3 ¼") are provided. Mark out the position for 4 bolt holes and drill a hole of ¼" diameter and 3 ½" deep at each location. Then place the anchors by means of several hammer blows. Finally, screw the 4 Hilti anchors nuts to the support brackets.

Flat bar support bracket (item 1) has two additional holes of 0.530'' in diameter that can be used with threaded rod of ½ in. or 12 mm. (holes not shown on the illustration)

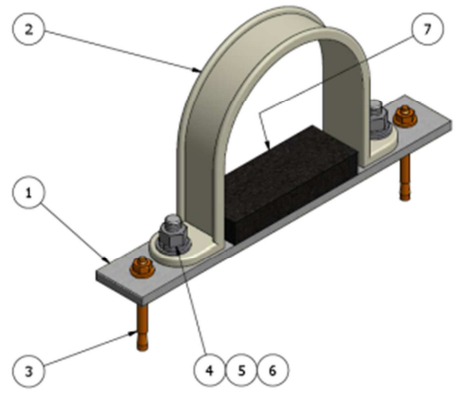

PART LIST			
ITEMS	QT	PART #	DESCRIPTION
1	1	20-1150A02024	FLAT BAR SUPPORT
2	1	99-MCMA3192T59	PLASTIC CLAMP FOR 4-1/2" OUTSIDE DIAMETER, 4" PIPE SIZE
3	2	99-HILT00045361	HILTI KWIK-BOLT ANCHOR IN CARBON STEEL 1/4 IN X 3 1/4 IN
4	2	05-V30SS048	HEX NUT, SS, 3/8-16
5	2	05-V40SS049	FLAT WASHER, SS, 3/8 (R)
6	2	05-V44SS049	SPRING LOCKWASHER, SS, 3/8 IN (R)
7	1	-	FOAM STRIP 0.625 X 1.5 LA X 4 LG

2.3 INSTALLATION OF THE SENSOR ONTO THE CHAMBER

NOTE: THE SENSOR IS VERY SENSITIVE AND FRAGILE; IT MUST BE HANDLED WITH GREAT CARE.

2.3.1 GENTLY REMOVE THE SENSOR'S PROTECTION CAP

2.3.2 FIXING THE SENSOR TO THE TOP COVER

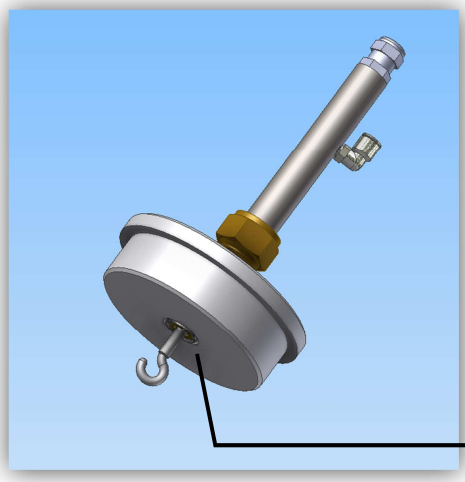

Insert the sensor into the brass connector in such a way that the end of the sensor's cylindrical body gets flush to the inner surface of the top cover. Then, tighten the connector to the sensor.

SENSOR'S END INSTALLED FLUSH TO THE TOP COVER'S INNER SURFACE

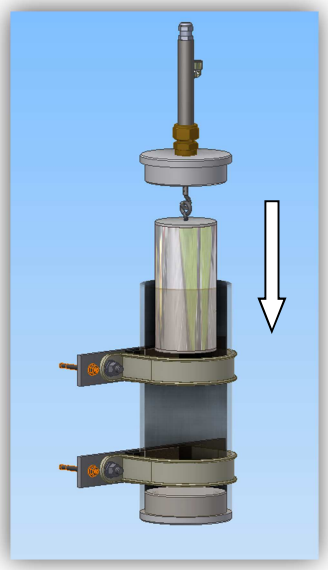

2.3.3 LOWER THE WEIGHT INTO THE CHAMBER

The next step is to attach the weight to the sensor. THIS OPERATION IS VERY CRITICAL AND SHOULD BE PERFORMED WITH EXTREME CARE. ROUGH OR CARELESS HANDLING DURING INSTALLATION CAN DAMAGE THE SENSOR.

While holding the top of the chamber with both hands, hook the weight to the sensor's hook and gently lift the weight by keeping the sensor's body vertical.

Carefully attach the weight to the eyebolt on the base of the sensor and lower the assembly into the chamber until the top cover sits firmly on top of the chamber cylinder. Check the zero reading of the sensor by connecting it to MB-3TL readout unit.

3 CALIBRATION DATA AND READINGS

3.1 CALIBRATION

All sensors are individually calibrated and delivered with their specific calibration factor on a calibration sheet.

3.2 INITIAL READINGS

The initial readings at atmospheric pressure and ambient temperature are obtained on-site.

3.3 READOUT PROCEDURE

To take a reading, follow the instructions in the MB-3TL instruction manual.

3.4 RELATIVE MOVEMENT EQUATION (WITH MB-3TL REAOUT UNIT)

The MB-3TL linear or frequency readings are converted to water level using the equations below.

To convert changes in linear or frequency readings to water level, use the following equations:

A1) POLYNOMIAL EQUATION:

Refer to calibration sheet for A, B and C coefficient.

$$\mathbf{EL\ (mm) = AL^2 + BL + C}$$

A2) RELATIVE MOVEMENT EQUATIONS:

$$\mathbf{\Delta EL = EL1 - EL0}$$

Where:

Δ**EL**: Indicates a variation of the water level (mm)

Note that a negative sign (-) indicates that the water level inside chamber increase, and a positive sign (+) indicates that the water level inside chamber decrease.

B) LINEAR EQUATION:

$$EL = G \times L$$

EL	=	Absolute value in the chamber (mm)
G	=	Gauge factor (refer to calibration sheet for this coefficient)
L	=	Actual reading in linear units

C) FREQUENCY READINGS (F)

To convert frequency readings into LU, one must use the following equation:

$$L = K\left(\frac{F^2}{1000}\right)$$

Where:

L	=	Linear reading in LU
K	=	Gauge constant for all transducers = 1.0
F	=	Reading in the frequency mode in Hz

Example: *Where F = 1739 Hz*

$$L = \frac{1.0 \times 1739^2}{(1000)} = 3024.1\ LINEAR\ \ units$$

4 CONVERSION TABLE FOR TEMPERATURE

Temp. °C	Reading in Ohms			Temp. °C	Reading in Ohms		
	With a 2K Thermistor	With a 3K Thermistor	With a 10K Thermistor		With a 2K Thermistor	With a 3K Thermistor	With a 10K Thermistor
-50		201100	670500	1	6208	9310	31030
-49		187300	670500	2	5900	8851	29500
-48		174500	624300	3	5612	8417	28060
-47		162700	581700	4	5336	8006	26690
-46		151700	542200	5	5080	7618	25400
-45		141600	440800	6	4836	7252	24170
-44		132200	472000	7	4604	6905	23020
-43		123500	411700	8	4384	6576	21920
-42		115400	384800	9	4176	6265	20880
-41		107900	359800	10	3980	5971	19900
-40	67320	101000	336500	11	3794	5692	18970
-39	63000	94480	315000	12	3618	5427	18090
-38	59000	88460	294900	13	3452	5177	17260
-37	55280	82870	276200	14	3292	4939	16470
-36	51800	77660	258900	15	3142	4714	15710
-35	48560	72810	242700	16	3000	4500	15000
-34	45560	68300	227700	17	2864	4297	14330
-33	42760	64090	213600	18	2736	4105	13680
-32	40120	60170	200600	19	2614	3922	13070
-31	37680	56510	188400	20	2498	3748	12500
-30	35400	53100	177000	21	2388	3583	11940
-29	33280	49910	166400	22	2284	3426	11420
-28	31300	46940	156500	23	2184	3277	10920
-27	29440	44160	147200	24	2090	3135	10450
-26	27700	41560	138500	25	2000	3000	10000

-25	26080	39130	130500	26	1915	2872	9574
-24	24580	36860	122900	27	1833	2750	9165
-23	23160	34730	115800	28	1756	2633	8779
-22	21820	32740	109100	29	1682	2523	8410
-21	20580	30870	102900	30	1612	2417	8060
-20	19424	29130	97110	31	1544	2317	7722
-19	18332	27490	91650	32	1481	2221	7402
-18	17308	25950	86500	33	1420	2130	7100
-17	16344	24510	81710	34	1362	2042	6807
-16	15444	23160	77220	35	1306	1959	6532
-15	14596	21890	72960	36	1254	1880	6270
-14	13800	20700	69010	37	1203	1805	6017
-13	13052	19580	65280	38	1155	1733	5777
-12	12352	18520	61770	39	1109	1664	5546
-11	11692	17530	58440	40	1065	1598	5329
-10	11068	16600	55330	41	1024	1535	5116
-9	10484	15720	52440	42	984	1475	4916
-8	9932	14900	49690	43	945	1418	4725
-7	9416	14120	47070	44	909	1363	4543
-6	8928	13390	44630	45	874	1310	4369
-5	8468	12700	42340	46	840	1260	4202
-4	8032	12050	40170	47	808	1212	4042
-3	7624	11440	38130	48	778	1167	3889
-2	7240	10860	36190	49	748	1123	3743
-1	6876	10310	34370	50	720	1081	3603
0	6532	9796	32660	51	694	1040	3469

Temp. °C	Reading in Ohms			Temp. °C	Reading in Ohms		
	With a 2K Thermistor	With a 3K Thermistor	With a 10K Thermistor		With a 2K Thermistor	With a 3K Thermistor	With a 10K Thermistor
52	668	1002	3340	102	128	192.2	640.3
53	643	965.0	3217	103	125	186.8	622.1
54	620	929.6	3099	104	121	181.5	604.4
55	597	895.8	2986	105	118	176.4	587.5
56	576	863.3	2878	106	114	171.4	571.0
57	555	832.2	2774	107	111	166.7	555.1
58	535	802.3	2675	108	108	162.0	540.0
59	516	773.7	2580	109	105	157.6	524.9
60	498	746.3	2488	110	102	153.2	510.7
61	480	719.9	2400	111	99	149.0	496.4
62	463	694.7	2316	112	97	145.0	483.1
63	447	670.4	2235	113	94	141.1	469.8
64	432	647.1	2157	114	91	137.2	457.4
65	416	624.7	2083	115	89	133.6	444.9
66	402	603.3	2011	116	87	130.0	433.4
67	388	582.6	1942	117	84	126.5	421.8
68	375	562.8	1876	118	82	123.2	410.7
69	363	543.7	1813	119	80	119.9	399.6
70	350	525.4	1752	120	78	116.8	389.4
71	339	507.8	1693	121	76	113.8	379.2
72	327	490.9	1636	122	74	110.8	369.4
73	316	474.7	1582	123	72	107.9	360.1
74	306	459.0	1530	124	70	105.2	350.8
75	296	444.0	1479	125	68	102.5	341.9
76	286	429.5	1431	126	67	99.9	333.0
77	277	415.6	1385	127	65	97.3	324.6
78	268	402.2	1340	128	63	94.9	316.6

79	260	389.3	1297	129	62	92.5	308.6
80	251	376.9	1255	130	60	90.2	301.1
81	243	364.9	1215	131	59	87.9	293.5
82	236	353.4	1177	132	57	85.7	286.0
83	228	342.2	1140	133	56	83.6	279.3
84	221	331.5	1104	134	54	81.6	272.2
85	214	321.2	1070	135	53	79.6	265.5
86	208	311.3	1036	136	52	77.6	259.3
87	201	301.7	1004	137	51	75.8	253.1
88	195	292.4	973.8	138	49	73.9	246.9
89	189	283.5	944.1	139	48	72.2	241.1
90	183	274.9	915.2	140	47	70.4	235.3
91	178	266.6	887.7	141	46	68.8	229.6
92	172	258.6	861.0	142	45	67.1	224.2
93	167	250.9	835.3	143	44	65.5	218.9
94	162	243.4	810.4	144	43	64.0	214.0
95	157	236.2	786.4	145	42	62.5	208.7
96	153	229.3	763.3	146	41	61.1	203.8
97	148	222.6	741.1	147	40	59.6	199.4
98	144	216.1	719.4	148	39	58.3	194.5
99	140	209.8	698.5	149	38	56.8	190.1
100	136	203.8	678.5	150	37	55.6	185.9
101	132	197.9	659.0				

Conversion Table (Continued)

5 MISCELLANEOUS

5.1 Conversion factors

TYPE	TO CONVERT FROM	TO	MULTIPLY BY
LENGTH	Microns	Inches	**3.94E-05**
	Millimeters	Inches	**0.0394**
	Meters	Feet	**3.2808**
AREA	Square millimeters	Square inches	**0.0016**
	Square meters	Square feet	**10.7643**
VOLUME	Cubic centimeters	Cubic inches	**0.06101**
	Cubic meters	Cubic feet	**35.3357**
	Liters	U.S. gallon	**0.26420**
	Liters	Can–Br gallon	**0.21997**
MASS	Kilograms	Pounds	**2.20459**
	Kilograms	Short tons	**0.00110**
	Kilograms	Long tons	**0.00098**
FORCE	Newtons	Pounds-force	**0.22482**
	Newtons	Kilograms-force	**0.10197**
	Newtons	Kips	**0.00023**
PRESSURE & STRESS	Kilopascals	Psi	**0.14503**
	Bars	Psi	**14.4928**
	Inches head of water*	Psi	**0.03606**
	Inches head of Hg	Psi	**0.49116**
	Pascal	Newton / square meter	**1**
	Kilopascals	Atmospheres	**0.00987**
	Kilopascals	Bars	**0.01**
	Kilopascals	Meters head of water*	**0.10197**
TEMPERATURE	**Temp. in °F = (1.8 x Temp. in °C) + 32** **Temp. in °C = (Temp. in °F – 32) / 1.8**		

* at 4 °C

E6TabConv-990505